Distributor Guide

Overview

SL has three types of keys: Distributor Key, Master Key and End-user Key. The features and users are described as follows:

Type	User	Feature
Distributor Key	Distributor	It is used to set up the Developer ID for SL
Master Key	Software Developer	It is for making the Update Package for End-user Key
End-user Key	Software User	Being set by software vendor and issue to the end user with software.

Master Key and End-user Key has a common “Developer ID” which consists of 8-digit hex number. Its last 4 digits are designed for distributor to distinguish the software vendors.

Recommendation: All keys sold to the same software vendor should have the identical Developer ID.

Tool Description

Distributor Tool is designed for distributor to set up Master Key and End-user Key. Click DistributorTool.exe to execute.

Distributor Tool has multi-language supports, the default interface language is English, if you required extra, please contact us. (Go to ContactUs)

Using Tool

DistributorTool is for modify the last 4 digits of Developer ID of Master Key and End-user Key.

1. Main windows has three sections.(Figure 3-1)

- Information List of Distributor Key
- Information List of keys which are about to set
- Setting section of Developer ID

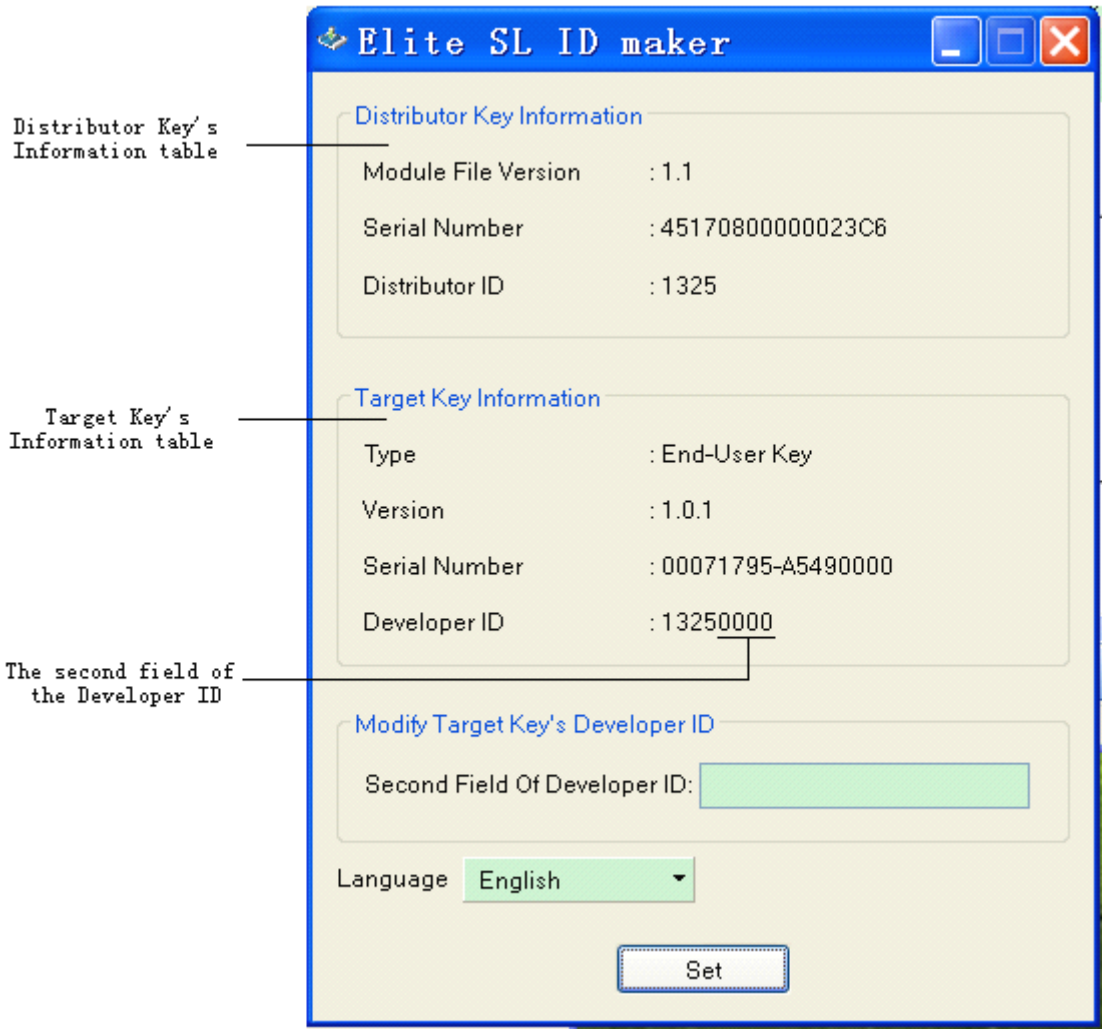


Figure 3-1

2. Functions of Each Sections

- Distributor Key Information – Display the info of Distributor Key.
- Target Key Information – Display the info of setting keys in brief.
- Modify Target Key's Developer ID – Input the second field of Developer ID.

3. Description of Interfacial Elements

Item	Description
Module File Version	Version number of Distributor Key
Serial Number	Unique Global SN of Distributor Key
Distributor ID	
Type	The category of the key
Version	Version of key being about to set

Item	Description
Serial Number	Unique Global SN of key being about to set
Developer ID	Developer ID of key being about to set
Second Field of Developer ID	Input the second field of Developer ID (4 digit in Hex)
Language	Press to opt the language
Set	Click to set Developer ID。

4. How to set Developer ID

While setting up the Developer ID of keys, the target key and Distributor key must be plugged at the same time. If you do not have extra USB port, you may need a hub to operate. The procedure is as following:

- Click DistributorTool. Exe to execute.
- Plug in the Distributor Key.
- Plug in a target key (Master Key or End-user Key).
- Input the 4-digit hex number in the second field of Developer ID.
- Press Button Set to setup Developer ID.

After successful setting, The Developer ID of Target Key Information will be updated.

Tip: while inputting the Developer ID, if it is 4-digit insufficient, it will be autofilled with initiation of 0. For instance, 2A, will be recognized as 002A. Leaving empty will be filled by 0000.